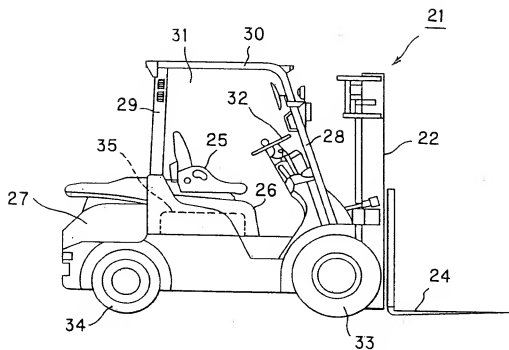
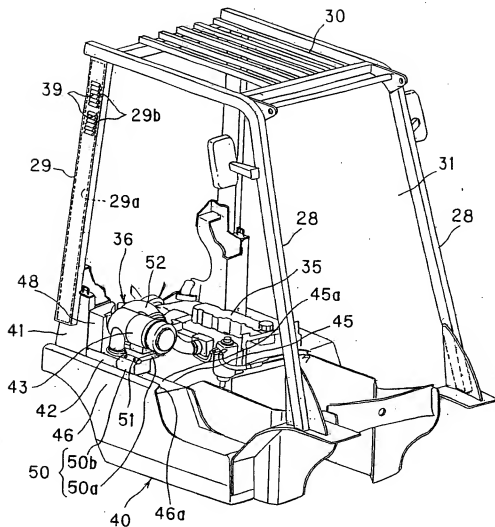


**FIG. 1**

- 21 Forklift
- 22 Hoisting/Lowering Mast
- 24 Fork
- 25 Driver's Seat
- 26 Engine cover
- 27 Counterweight
- 28 Front pillar
- 29 Rear pillar
- 30 Head Guard
- 31 Driver's Cab
- 32 Steering Handle
- 33 Front Wheel
- 34 Rear Wheel

**FIG. 2**

28 Front pillar

29 Rear pillar

29a passageway

29b Air Intake port

30 Head Guard

31 Driver's cab

40 Body Frame

41 Rear Tower

42 Expansion Silencer

43 Air Cleaner

45 Working Oil Tank

45a Top Surface

46 Side plate

46a Upper End of Side plate

48 Resonance Silencer

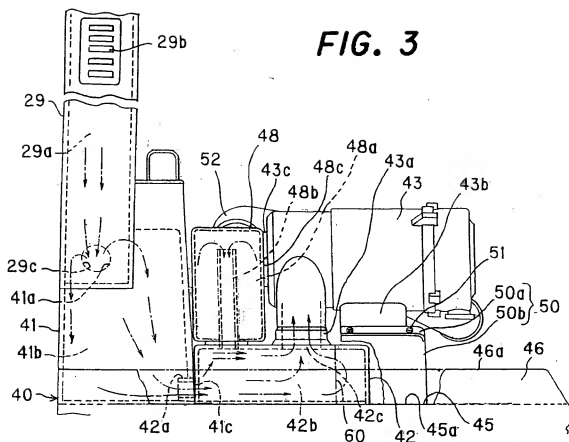
50 Bracket

50a Base Bracket

50b Support Bracket

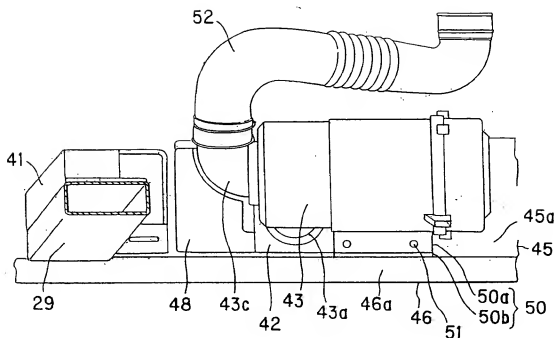
51 Bolt

52 Duct

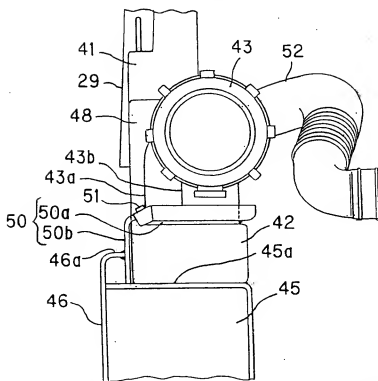
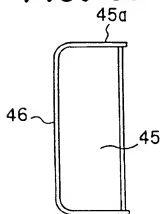
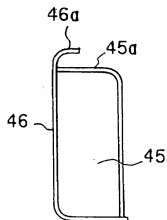
**FIG. 3**

29 Rear Pillar  
 29a Passageway  
 29b Air Intake Port  
 29c Connection Port  
 40 Body Frame  
 41 Rear Tower  
 41a Connection Port  
 41b Space  
 41c Connection Port  
 42 Expansion Silencer  
 42a Connection Port  
 42b Space  
 42c Connection Port  
 43 Air Cleaner  
 43a Connection Port  
 43b Lower Portion (Mounting Portion) of Air Cleaner  
 43c Connection Port

45 Working Oil Tank  
 45a Top Surface  
 46 Side Plate  
 46a Upper End of Side Plate  
 48 Resonance Silencer  
 48a Expansion Chamber  
 48b Cylinder  
 48c Case  
 50 Bracket  
 50a Base Bracket  
 50b Support Bracket  
 51 Bolt  
 52 Duct

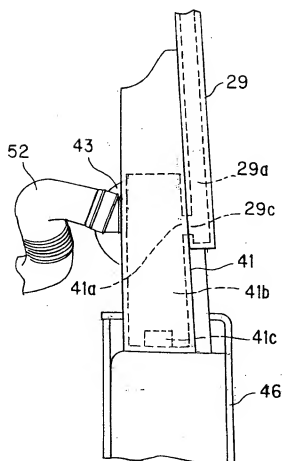
**FIG. 4**

- 29 Rear Pillar
- 41 Rear Tower
- 43 Air Cleaner
- 43a Connection Port
- 43b Lower Portion (Mounting Portion) of Air Cleaner
- 43c Connection Port
- 45 Working Oil Tank
- 45a Top Surface
- 46 Side Plate
- 46a Upper End of Side Plate
- 48 Resonance Silencer
- 50 Bracket
- 50a Base Bracket
- 50b Support Bracket
- 51 Bolt
- 52 Duct

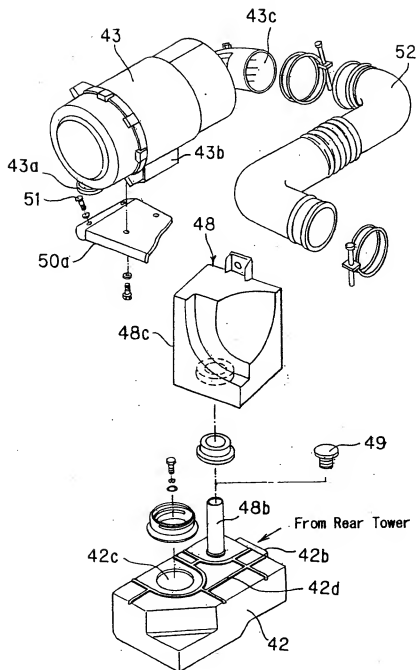
**FIG. 5A****FIG. 5B****FIG. 5C**

29 Rear Pillar  
 41 Rear Tower  
 42 Expansion Silencer  
 43 Air Cleaner  
 43a Connection Port  
 43b Lower Portion (Mounting Portion) of Air Cleaner  
 45 Working Oil Tank  
 45a Top Surface

46 Side Plate  
 46a Upper End of Side Plate  
 48 Resonance Silencer  
 50 Bracket  
 50a Base Bracket  
 50b Support Bracket  
 51 Bolt  
 52 Duct

**FIG. 6**

- 29 Rear Pillar
- 29a Passageway
- 29b Air Intake Port
- 29c Connection Port
- 41 Rear Tower
- 41a Connection Port
- 41b Space
- 41c Connection Port
- 43 Air Cleaner
- 46 Side Plate
- 52 Duct

**FIG. 7**

42 Expansion Silencer

42b Space

42c Connection Port

42d Reinforcement Rib

43 Air Cleaner

43a Connection Port

43b Lower Portion (Mounting Portion) of Air Cleaner

43c Connection Port

48 Resonance Silencer

48b Cylinder

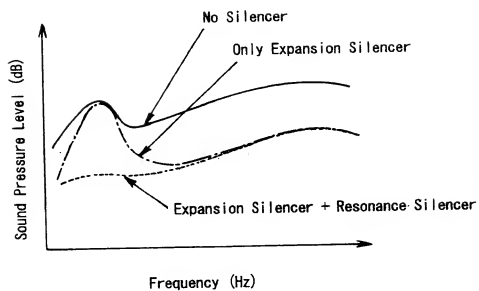
48c Case

49 Lid

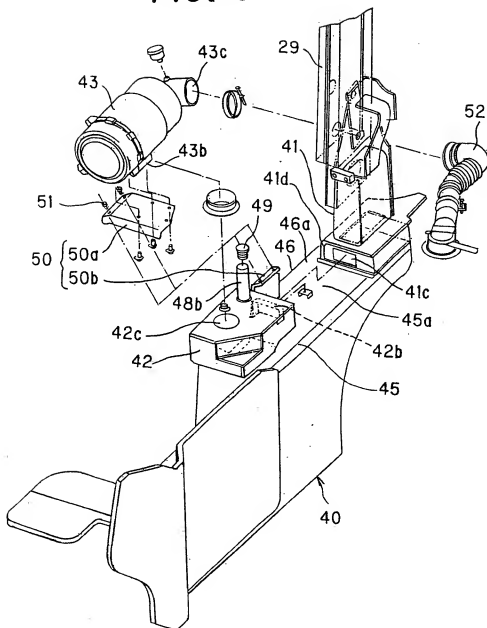
50a Base Bracket

51 Bolt

52 Duct

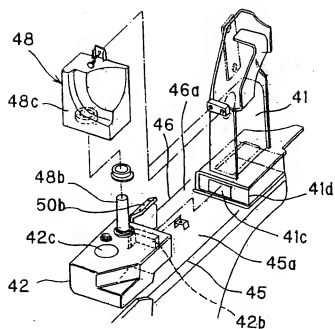
**FIG. 8**



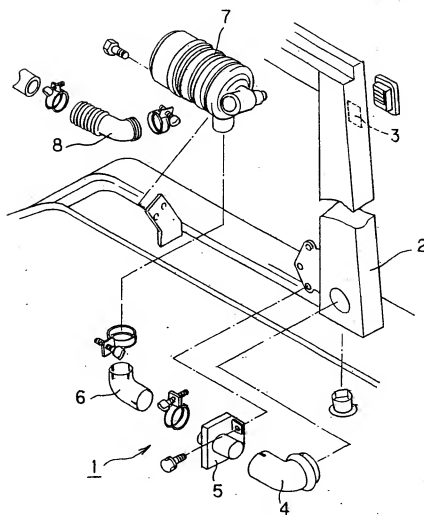
**FIG. 9**

29 Rear Pillar  
 41 Rear Tower  
 41c Connection Port  
 41d Rear Tower Base  
 42 Expansion Silencer  
 42b Space  
 42c Connection Port  
 43 Air Cleaner  
 43b Lower Portion (Mounting Portion) of Air Cleaner  
 43c Connection Port  
 45 Working Oil Tank  
 45a Top Surface

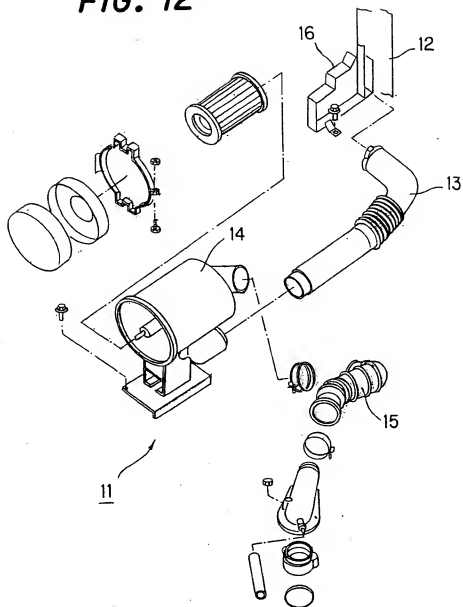
46 Side Plate  
 46a Upper End of Side Plate  
 48b Cylinder  
 49 Lid  
 50 Bracket  
 50a Base Bracket  
 50b Support Bracket  
 51 Bolt  
 52 Duct

**FIG. 10**

- 41 Rear Tower
- 41c Connection Port
- 41d Rear Tower Base
- 42 Expansion Silencer
- 42b Space
- 42c Connection Port
- 45 Working Oil Tank
- 45a Top Surface
- 46 Side Plate
- 46a Upper End of Side Plate
- 48 Resonance Silencer
- 48b Cylinder
- 48c Case
- 50b Support Bracket

**FIG. 11**

- 1 Air Intake System
- 2 Rear Pillar
- 3 Air Intake Port
- 4 Duct
- 5 Expansion Silencer
- 6 Duct
- 7 Air Cleaner
- 8 Duct

**FIG. 12**

- 11 Air Intake System
- 12 Rear Pillar
- 13 Duct
- 14 Air Cleaner
- 15 Duct
- 16 Resonance Silencer